




# "Nine Lives" Track Clearance Marker

#4015-144

## Installation Guide

Use to comply with  
FRA 49 CFR 218.101

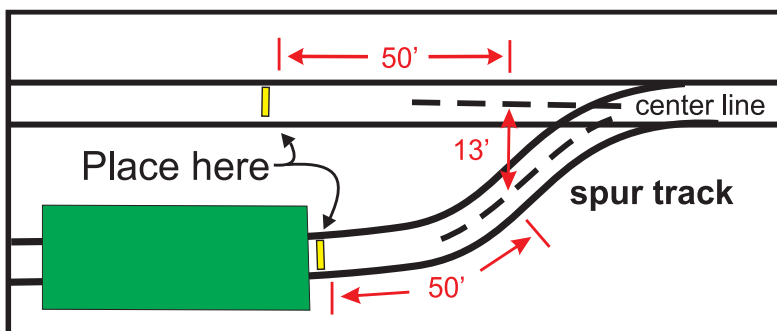

**Please consult with your local railroad  
when installing track clearance markers.**

Track clearance markers should be installed on both tracks converging on a switch.

Markers should be placed 50 feet from points measuring 13 feet on-center to the adjacent track

In winter, brush away snow to keep marker visible.

*Track Clearance Marker can also be used in dock areas and inside repair shops to delimit car parking positions.*

### **ALDON COMPANY, INC.**

3410 Sunset Avenue | Waukegan, Illinois 60087

847.623.8800 Fax: 847.623.6139

e-rail@aldonco.com