




Track Clearance Marker

for Flush Rail Track

Installation Guide

#4015-146 *for asphalt paving* **#4015-156** *for concrete paving*

Use to comply with FRA Rule 49 CFR 218.101

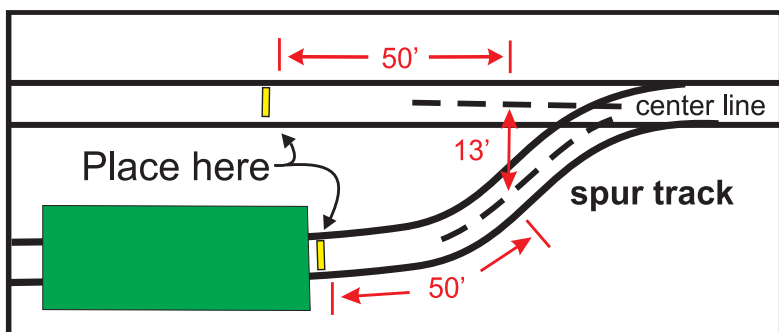

**Please consult with your local railroad
when installing track clearance markers.**

Track clearance markers should be installed on both tracks converging on a switch.

Markers should be placed 50 feet from points measuring 13 feet on-center to the adjacent track

In winter, brush away snow to keep marker visible.

Track Clearance Marker can also be used in dock areas and inside repair shops to delimit car parking positions.

ALDON COMPANY, INC.

3410 Sunset Avenue | Waukegan, Illinois 60087

847.623.8800 Fax: 847.623.6139

e-rail@aldonco.com