




# Magnetic Track Clearance Markers

#4015-248 *plain yellow*

#4015-255 *"Secure Cars"*

#4015-256 *"Check Clearance"*

## INSTALLATION GUIDE

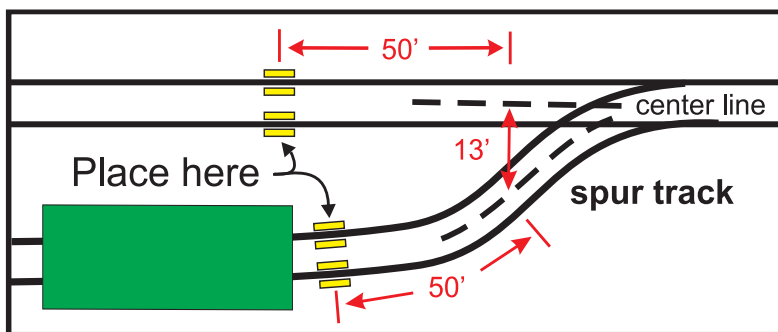

**Please consult with your local railroad  
when installing track clearance markers.**

Install Track Clearance Markers on both converging tracks of a switch.  
Markers are also useful to establish "no go" points on any track.

- 1 Establish a point on the rails where the centers of each track are 13 feet apart.
- 2 Place the Markers 50 feet from that point on both sides of the rail webs of both tracks. Position each Marker so its mid-point is at the 50-foot mark.
- 3 In winter, keep markers visible by removing snow.

**USE TO COMPLY WITH FRA RULE 49 CFR 218.101**

### **ALDON COMPANY, INC.**

3410 Sunset Avenue | Waukegan, Illinois 60087

847.623.8800 Fax: 847.623.6139

e-rail@aldonco.com