


Universal Track Gauge & Elevation Level Handle Assembly

4022-28

3-Piece Handle Assembly

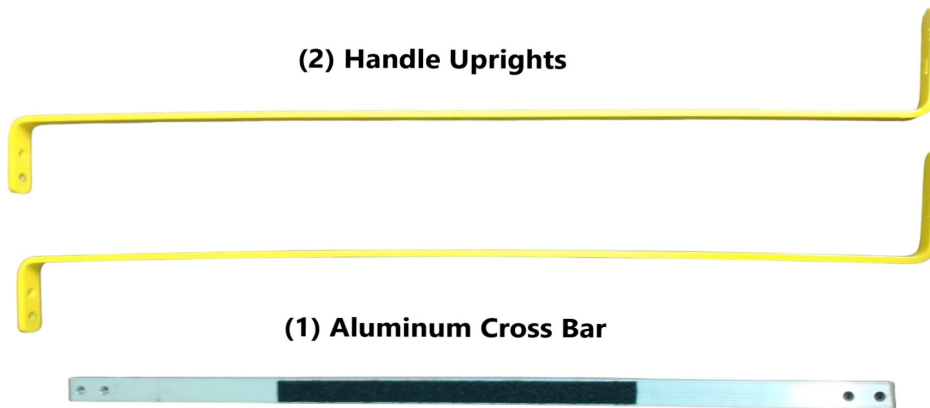

Fasteners



(2) Thumb Screws



(2) Hose Clamps



(4) 1/4-20 x 3/4" Hex Bolts
(4) 1/4-20 Nuts

Tools Required

7/16" Socket & Wrench


5/16" Socket Wrench

Replacement Parts

PN: 6049C – Hose Clamp


PN: 7580 – Thumb Screw

Handle Assembly

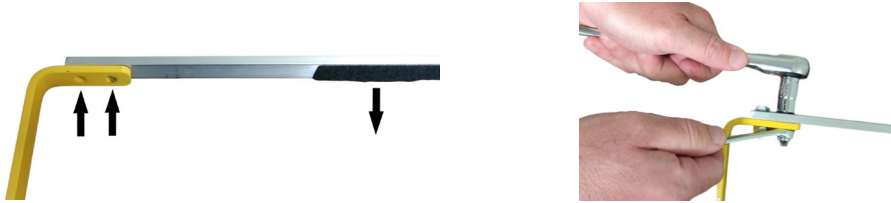

Position the aluminum cross bar above each handle upright, align the two holes on the cross bar with the holes on the handle upright. **The Velcro on the cross bar should be facing the handle upright.** Use a 7/16" socket and wrench to fasten the cross bar to the handle upright. Repeat the same process on the other end of the handle. Make sure to fully tighten all (4) 1/4" bolts and lock nuts on the handle.

Handle Attachment (Thumb Screw)

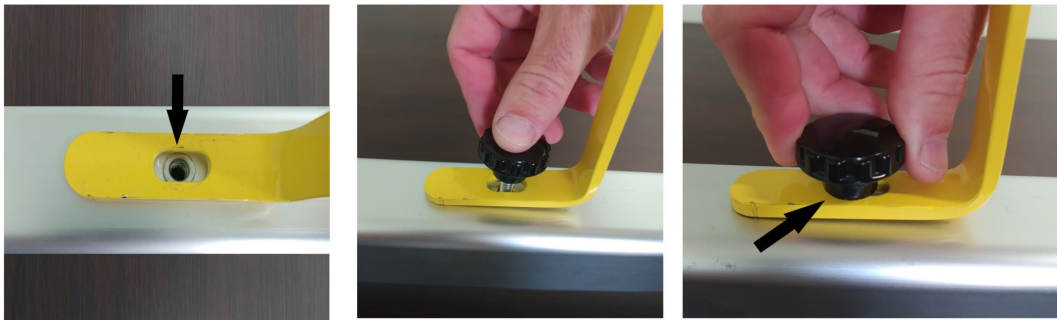

With the handle fully assembled, position it on top of your track gauge. Align the oval shaped hole on one end of the handle over the rivet nut and fasten it securely to the track gauge using a thumb screw. Repeat the same process on the other end of the handle.

Handle Attachment (Hose Clamps)



Using a 5/16" socket wrench, completely open the hose clamp. Position the hose clamp over the handle and track gauge, tighten the clamp until the handle is secure. Repeat the same process on the other end of the handle.

Accessories

PN: 4022-29
Red Flag for Universal
Track Gauge Handle



Aldon Company, Inc. | 3410 Sunset Avenue | Waukegan, Illinois 60087

PH. 847.623.8800 | FX. 847.623.6139
www.aldonco.com | e-rail@aldonco.com