


THIS DRAWING IS TRANSMITTED IN CONFIDENCE THAT ANY AND ALL INFORMATION INCLUDED WITHIN ARE THE SOLE PROPERTY OF ALDON COMPANY, INC. THIS DRAWING MAY NOT BE REPRODUCED OR TRANSMITTED IN PART OR WHOLE WITHOUT WRITTEN CONSENT.

HOW TO APPLY A PADLOCK TO YOUR CAR BLOCK (CAR BLOCKS DO NOT COME WITH LOCKING HOLE PREDRILLED.)

NOTE: MAKE SURE CAR BLOCK IS PROPERLY INSTALLED ON RAIL
BEFORE MARKING LOCKING HOLE LOCATION.

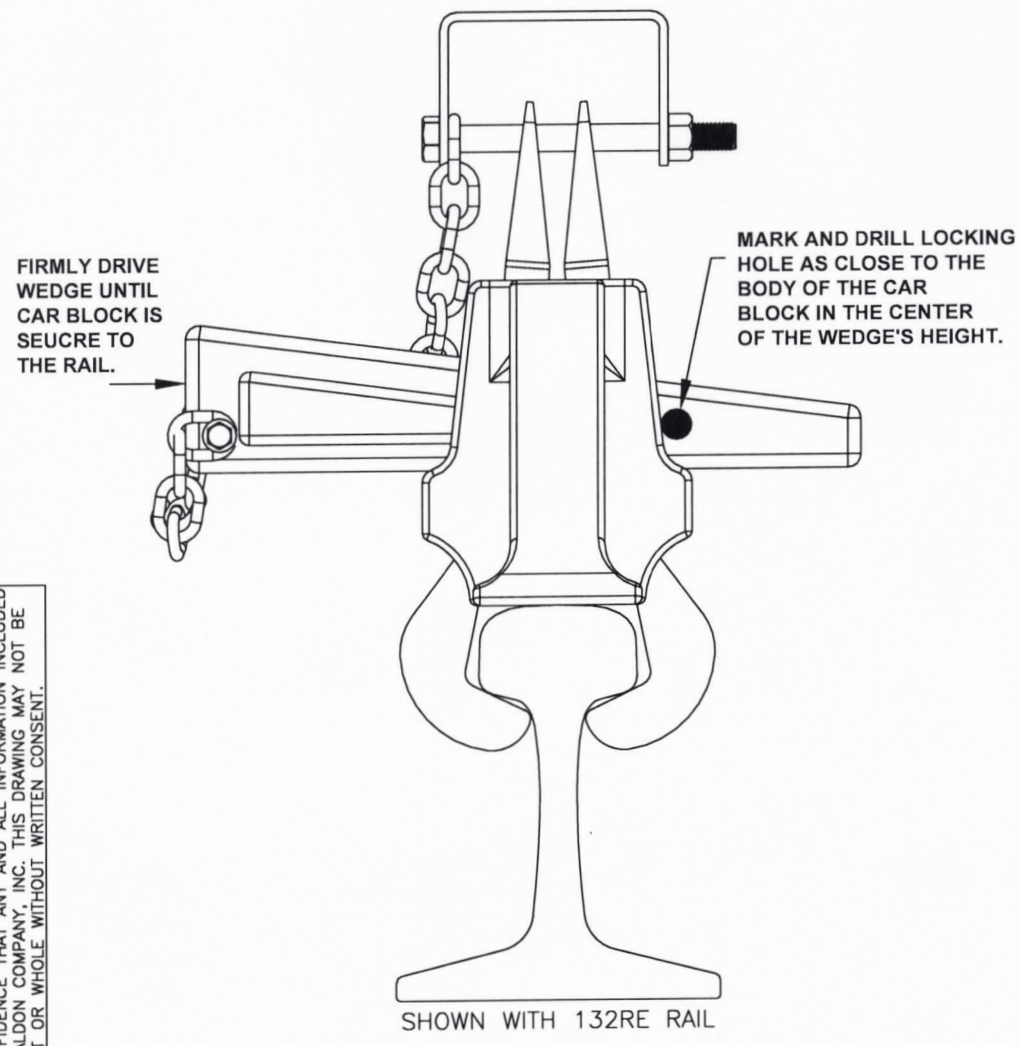

ALDON Company, Inc.		3410 Sunset Avenue, Waukegan, Illinois, 60087		Phone: 847-623-8800		Fax: 847-623-6139	
TOLERANCE		TITLE: CB-6B CAR BLOCK, w/LOCK HOLE		DRAWN: HILL		REV: -	
DECIMAL		DRAWING: 4016-02		PAGE: 3 OF 3		REV: -	
.XX:		DATE: 12/20/2020					
.XXX:							
FRACTION							
XX/XX:							
ANGLE							
X°:							
FINISH: YELLOW PAINT							
SCALE: 3:1 *DO NOT SCALE*							
HEAT TRT: -							
MATERIAL: SEE INDIVIDUAL COMPONENTS							